

Corinex AV200 Powerline Ethernet Wall Mount



Quick Start Guide

This document, as well as the software described in it, is furnished under license and may be used or copied only in accordance with the terms of the license. The content of this document is furnished for informational use only, it is subject to change without notice, and it does not represent a commitment on the part of Corinex Communications Corp.

Corinex Communications Corp. assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

It is our policy to enhance our products as new technologies, hardware components, software and firmware become available; therefore, the information contained in this document is subject to change without notice.

Some features, functions, and operations described in this document may not be included and sold in certain countries due to government regulations or marketing policies.

The use of the product or its features described in this document may be restricted or regulated by law in some countries. If you are unsure which restrictions or regulations apply, you should consult your regional Corinex office or the authorized reseller.

Published by:
Corinex Communications Corp.
670 - 789 West Pender Street
Vancouver, B.C.
V6C 1H2 CANADA
Tel: +1 - 604 - 692 0520
Fax: +1 - 604 - 6940061

Corinex is a registered trademark of Corinex Communications Corp.

Apple, MAC OS X are either registered trademarks or trademarks of Apple Computer, Inc. in the U.S.A. and/or other countries.
Microsoft, MS-DOS, MS, Windows are either registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.

All products or company names mentioned herein may be the trademarks of their respective owners.

Copyright (c) 2001-2006 by Corinex Communications Corp.

NOTE: This equipment has been tested and found to comply with the limits for a Class B information technology equipment. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the end user is advised to take adequate measures.

2006-04-28 ver.2.0

Quick Start Guide

Thank you for choosing the *Corinex AV200 Powerline Ethernet Wall Mount*. Please follow the steps below, to set up your adapter and the initial configuration.

1. Plug the *Wall Mount* directly into a wall outlet, not a power strip. It will power up automatically.
2. Connect the computer to the adapter, using a straight-forward Ethernet cable which came with the product.
3. Change the IP address of your computer to 10.10.1.1, and the network mask to 255.255.0.0. For more information on how to set the IP address on your system, please see the User Guide, which can be found on the enclosed CD.
4. Open a web browser (eg. Internet Explorer) and type the following address : <http://10.10.1.69>.
5. This will open the configuration pages for your *Corinex AV200 Powerline Ethernet Wall Mount*.

Corinex AV200 Powerline Ethernet Adapter Web Configuration

Authentication

This unit is password protected. Please enter the correct password to access the web pages

•Password

Ok Cancel

© 2003 Corinex Global, Corp. All Rights Reserved

3

On the authentication screen, enter “**paterna**” in the password field and click **OK**.

6. You should now see the main page of the configuration interface.

AV200 Powerline Ethernet Adapter

Status | [Additional information](#) | [Basic settings](#) | [Advanced settings](#)

General Information

MAC Type	In-Home AV	Node Type	AP
MAC Address	000BC20D177E		
IP Address	10.10.1.69	Number of Boots	6
SYNC	-	MODE	13
AGC RX	Enabled	RXG	0
AGC TX	Disabled	TXG	1
Access Protocol	DONE		

Available Connections

PLC Connections:

PLC Port	MAC Address	Phy Tx Throughput	Phy Rx Throughput	Bridge State	Network Id
<i>Empty list</i>					

External Interfaces:

Interface	Phy Throughput	Bridge State
EXTA	100 Mbps	Forwarding

© 2008 Corinex Global, Corp. All Rights Reserved

Please click on **Advanced Settings** in the main menu. On the next page, click on **Network Settings** in the submenu.

- In the **Network Settings** section of the configuration page, change the IP address of your *Corinex AV200 Powerline Ethernet Wall Mount*.

Network Configuration*

•IP Configuration Fixed ▾

Fixed IP Configuration:

•IP Address

•Subnet Mask

•Default Gateway IP Address

*All changes in *Network Configuration* will have effect after system boot

Note : Please make sure that each adapter in your network has a unique IP address.

- After entering a new IP Address, click **OK**. Please wait until the configuration page reloads.
- Navigate to the Tools section in the submenu. Click on **Hardware Reset**.

AV200 Powerline Ethernet Adapter

[Status](#) | [Additional information](#) | [Basic settings](#) | [Advanced settings](#)

[MAC](#) | [Network](#) | [PHY](#) | [Multicast](#) | [VLAN](#) | [QoS](#) | [Security](#) | [Firmware Update](#) | [Tools](#)

Clicking on the **Hardware Reset** button will reset, or reboot, your adapter. Any changes in the configuration, that require a reboot of the device, such as Network Settings, will be applied.

Hardware Reset

In order to invoke a factory reset, a specific password is required. If the password is valid, the configuration will be set to a default value (the default factory configuration defined by the Factory Settings) and the modem will be rebooted.

Factory Reset*:

- Password

***Warning!** Current configuration will be lost

© 2005 Corinex Global, Corp. All Rights Reserved

The wall mount adapter will reboot with the new IP Address.

Please change the IP address for each and every adapter in your network. For example, if you have 3 adapters in your network, you can use the following configuration:

Adapter no.	IP Address
1	10.10.1.1
2	10.10.1.2
3	10.10.1.3

The CD included with your *Corinex AV200 Powerline Ethernet Wall Mount* features software for optimizing network performance on Microsoft Windows operating systems, for use with the *Corinex AV200 Powerline Ethernet Wall Mount*. Follow the steps below if you wish to optimize your system.

1. Insert the enclosed CD in your CD-ROM drive if you haven't already done so.
2. Navigate to the **Scripts** folder on the CD and execute the appropriate script for your operating system.
 - a) For Windows 98/ME, please execute the file `tcpwin_w98.reg`.
 - b) For Windows 2000/XP, please execute the file `tcpwin_xp.reg`
 - c) For a Linux PC with kernel version 2.4 or higher, open the console and execute the command `"/tcpwin.sh 512"` after logging in as a root user.

After executing the script, please reboot your computer.

Configuration of your *Corinex AV200 Powerline Ethernet Wall Mount* is now complete.

For more information about the setup, please read the User Guide, which is also included on the CD and thanks again for choosing Corinex!